"E" SERIES PATIO BASE LAMP ASSEMBLY GUIDE
FOR MODELS:
00330, 00331, 00370, 00371, 00420, 00421, 00440, 00441, 00460, 00470

Please identify ALL PARTS with parts list PRIOR to starting assembly.

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING FIXTURES.

If for some reason you are missing parts or have problems with your fixture **DO NOT CALL OR RETURN TO THE RETAILER.** Call for direct assistance at: 866-736-0796

IMPORTANT NOTICE:

Extra color match screws may be included in parts bag for your convenience.

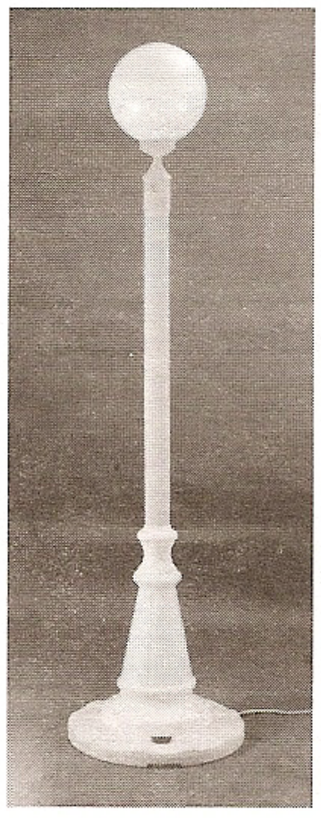

MODEL 00331
1 - 100 watt

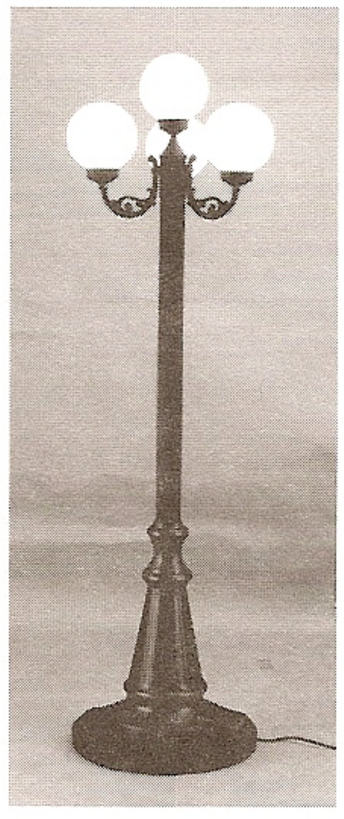

MODEL 00370
4 - 60 watts

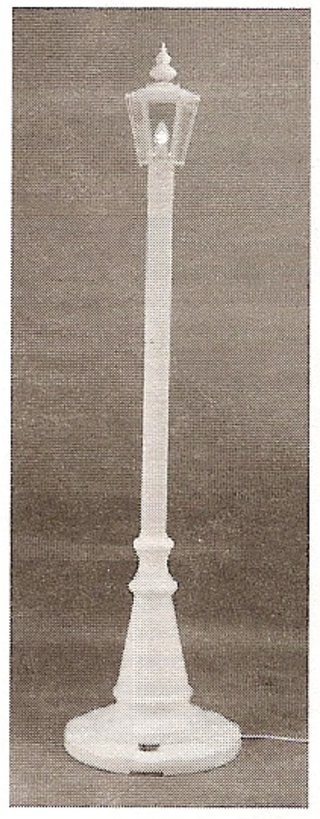

MODEL 00421
1 - 100 watt

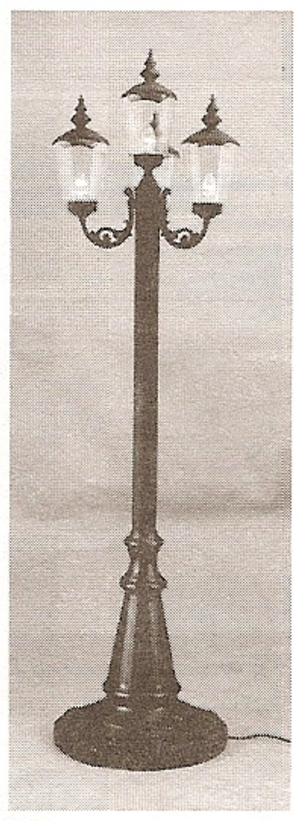

MODEL 00440
4 - 60 watts

WARNINGS AND CAUTIONS: When using the outdoor portable lamp, safety should always be followed to reduce the risk of fire, electric shock or personal injury. (1) Read all instructions. (2) Use only three-wire outdoor extension cords that have three-prong grounding plugs and grounding receptacles that accept the appliance plug. (3) Ground Fault Circuit Interrupter (GFCI) protection should be provided on the circuit(s) or outlet(s) to be used for the wet location portable lamp. Receptacles are available having built in GFCI protection and are able to be used for this measure of safety. (4) Use only with an extension cord for outdoor use, such as an extension cord of type SW, SJW-A, SOW, SOW-A, STW, STW-A, STOW, STOW-A, SJW, SJW-A, SJOW, SJOW-A, SJTW, SJTW-A OR SJTOW OR SJTOW-A. (5) **CAUTION: Risk of electrical shock. Do not use with extension cord near water or where water may accumulate. Keep light at least 16 feet away from pools and spas.** (6) Save these instructions.

DANGER!! Risk of electric shock. Be sure that base cord and plug is not plugged into an outlet before proceeding with the following assembly instructions.